

Roller Assembly Kit

給紙ローラーキット


 
 
搓纸轮装置



413179100

©2016 Seiko Epson Corporation.
All rights reserved. 20160420
2016年4月発行
Printed in XXXXXX
YYYYYYYYYYY


B12B819031 / B12B819041 / DS53RKIT1

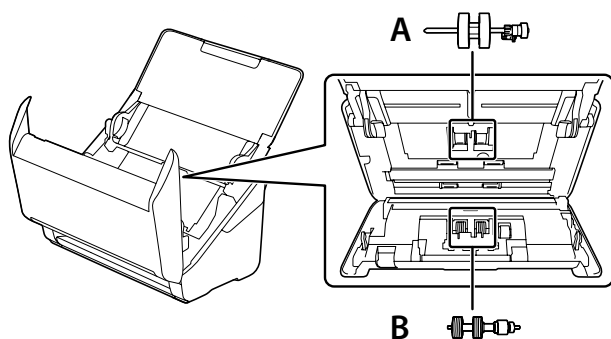


Mark for
China only




仅用于中国大陆地区

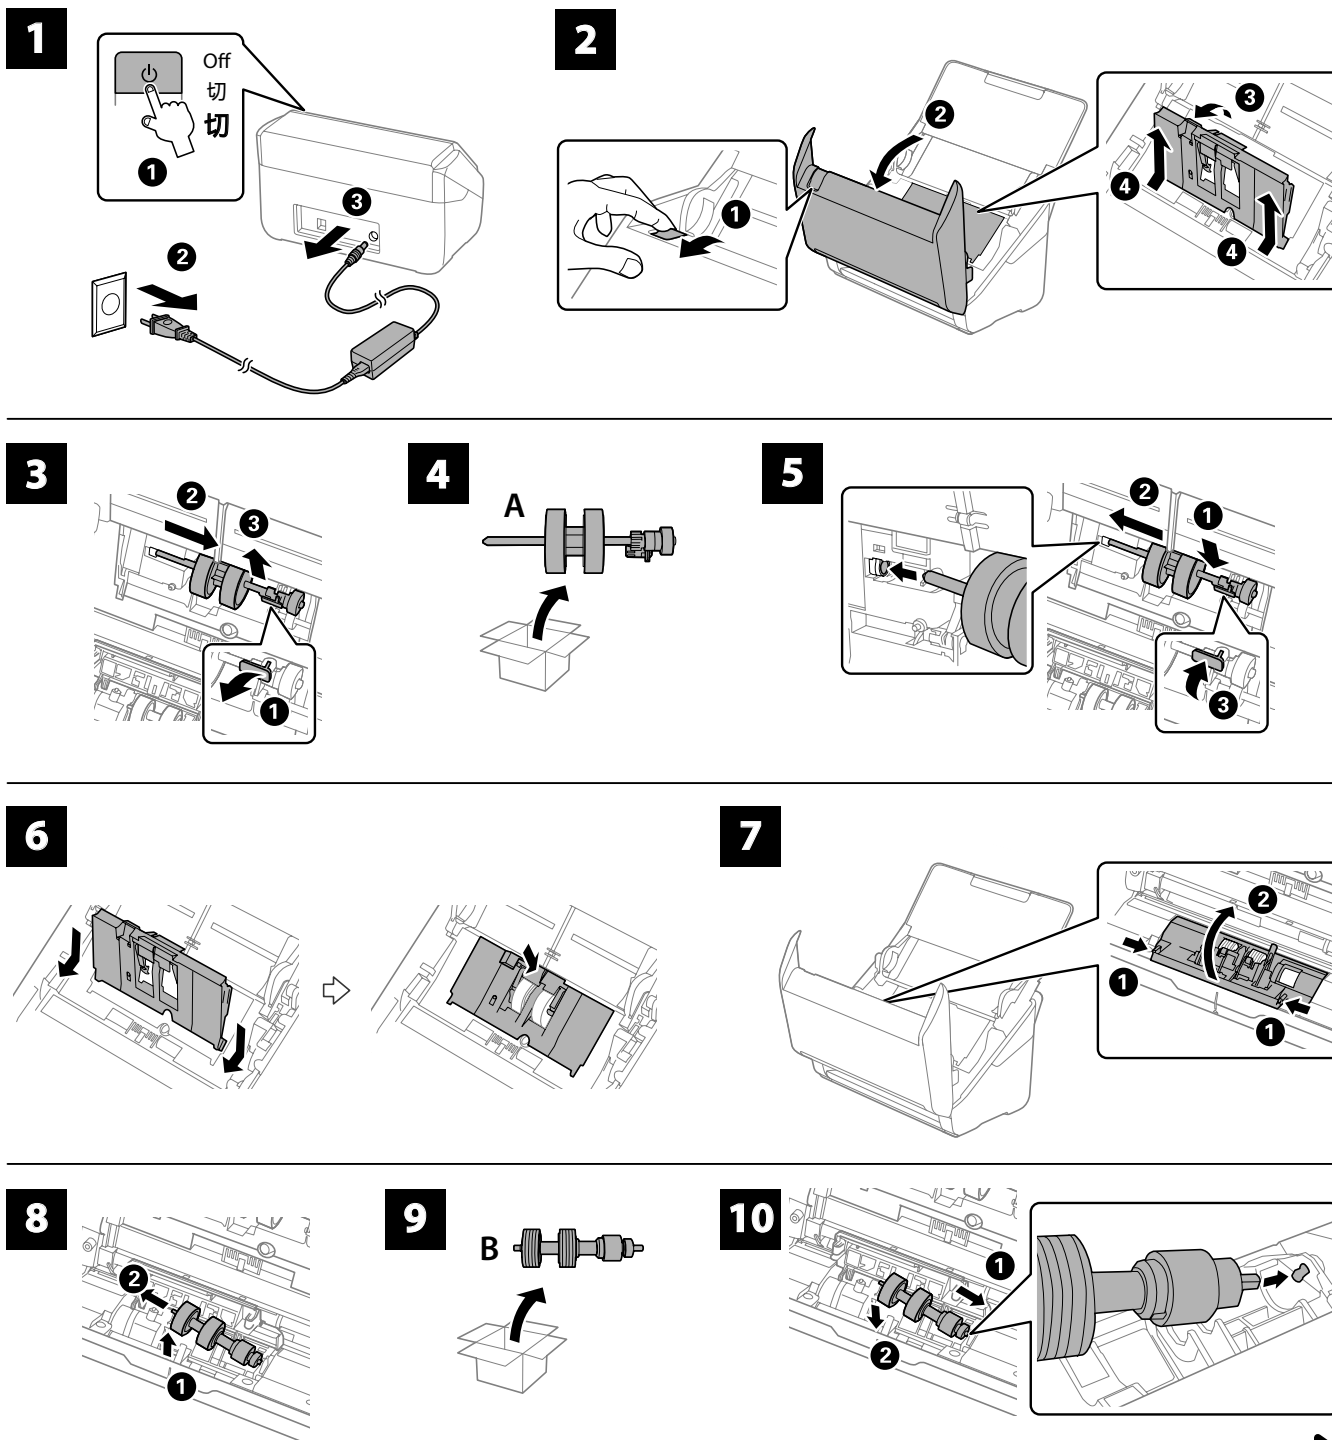


11

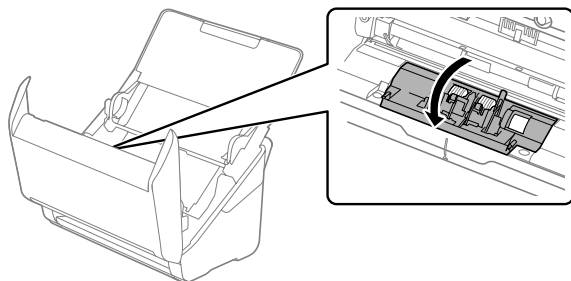




12

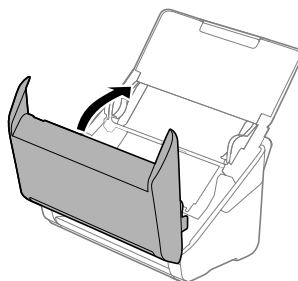

13

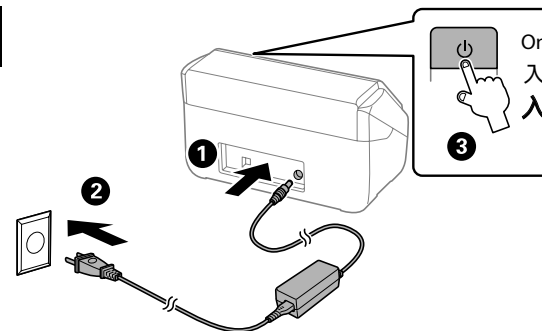

14

 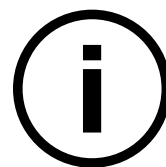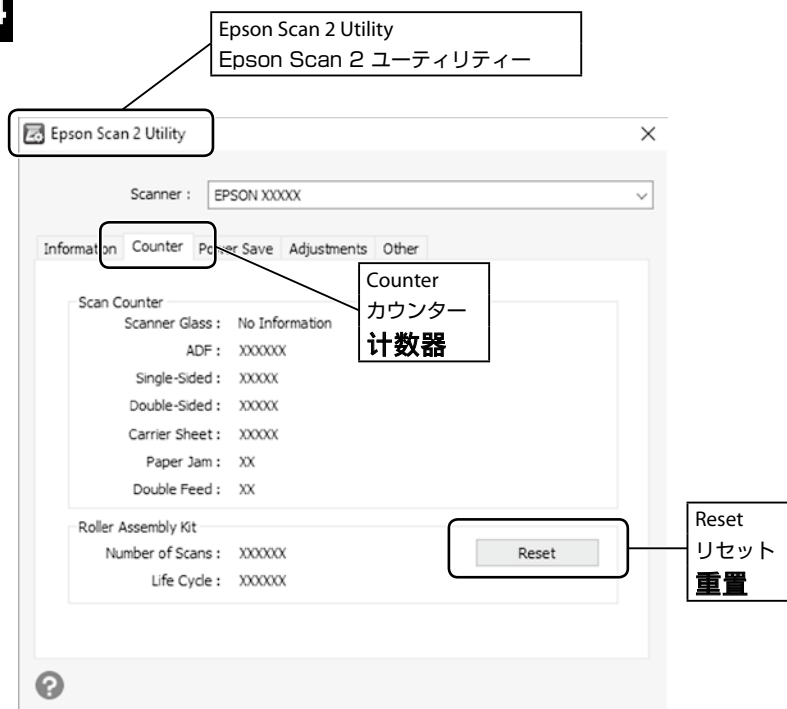

EN	User's Guide	DA	Brugervejledning	RU	Руководство пользователя
FR	Guide d'utilisation	FI	Käyttöopas	UK	Посібник користувача
DE	Benutzerhandbuch	NO	Brakerhåndbok	KK	Пайдаланушы нұсқаулығы
NL	Gebruikershandleiding	SV	Användarhandbok	AR	دليل المستخدم
IT	Guida utente	PL	Przewodnik użytkownika	FA	راهنمای کاربر
ES	Manual de usuario	CS	Uživatelská příručka	TH	คู่มือผู้ใช้
PT	Guia do Utilizador	HU	Használati útmutató	ID	Panduan Pengguna
TR	Kullanım Kılavuzu	SK	Používateľská príručka	MS	Panduan Pengguna
EL	Οδηγίες χρήστη	RO	Ghidul utilizatorului	VI	Số hướng dẫn sử dụng
SL	Navodila za uporabo	BG	Ръководство на потребителя	JA	ユーザーズガイド
HR	Korisnički vodič	LV	Lietotāja rokasgrāmata	SC	用戶指南
MK	Упатство за корисникот	LT	Vartotojo vadovas	TC	進階使用説明
SR	Korisnički vodič	ET	Kasutusjuhend	KO	사용설명서


<http://www.epson.com>