

# **WH-10**

| Installation Manual. | •• | • | •• | • | • | •• | • | • | • • | <br>• | • | • | • | •• | • | 2  |
|----------------------|----|---|----|---|---|----|---|---|-----|-------|---|---|---|----|---|----|
| 設置マニュアル              |    | • |    | • | • |    | • | • | • • | <br>• | • | • | • | •• | , | 13 |

## Wall Hanging Bracket Set WH-10 Installation Manual

The WH-10 is an optional hanging bracket for attaching the printer to a wall. This manual describes the procedures and precautions for installing and using the WH-10.

## Applicable Printer Models

This WH-10 can be used only with the products specified below. Please note that the use of products other than those specified may result in improper installation and operation.

- TM-T88IV/TM-T88V/TM-T88VI
- $\square$ TM-T88IV/TM-T88V/TM-T88VI with the OT-BX88/OT-BX88V/OT-BX88VI power supply cover
- TM-U220B/TM-U220D with the Serial numbers xxx030000 or later. (xxx depends on the model.)
- TM-U230
- TM-T90
- $\square$ TM-L90

### Precautions

- $\square$ To use the TM-T88IV/TM-T88V/TM-T88VI on the wall, be sure to attach the connector cover to the printer.
- To prevent paper jams and to insure the print density level, do not use 3-sheet roll paper with the TM-U220.
- Static electricity may cause cut paper to adhere to the printer case. (This static electricity will not affect the operation of the printer.)

## Unpacking

Open the package and confirm that it contains all of the parts listed in the illustration. If any parts are missing or damaged, please contact your dealer for assistance.



□ Wall-mount \*Note: Screws for wall-mount are not included.

°. . . . . .

0

Brackets (2 pieces)



ጠ Œ

Roll-paper stopper for TM-T88IV



□ Roll-paper stopper for TM-T88V/ TM-T88VI





Installation manual

Control panel sheets

- For TM-T88IV
- For TM-T88V
- For TM-U220

\*Note: Control panel sheets for the TM-T90, the TM-L90, and the TM-U230 are packed with the printer.







Screw (3×10) for TM-U220 (1 piece)

 Screws (3×6) for TM-U220 (5 pieces)
 \*Note: 4 of the screws are used for attaching the brackets.

Roll paper holder for hanging bracket for TM-U220 Cam for TM-U220

Depending on the conditions during storage and shipping, some rust may form around the edges of the wall-mount or brackets. This may be removed with sandpaper.

## Installation

Before installation, be sure that the printer and all equipment connected to the printer is turned off. Detach all cables from the body of the printer.

## Installing the Wall-mount



To fix the printer securely, install the wall-mount on a wall made of wood, concrete, or metal. The thickness of the wall should be 10 mm or more.

In order to insure that the wall-mount can properly support the weight of the printer, please secure it with screws appropriate to the type of wall the wall-mount is installed on. A screw with 4 mm diameter and length of 12 mm or more is recommended.

Be sure to fasten the wall-mount securely to the wall with a screw in each of the 10 holes.

Before attaching the wall-mount, make sure enough space remains around the printer.

Make sure that there is enough space for opening the printer covers.

Attach the wall-mount to the wall in the position illustrated to the right (with the area marked **A** at the top), and fasten securely with 10 screws. These screws are not included; please use screws appropriate to the type of wall being used.

## Affixing the Control Panel Sheet

For the TM-T88IV/TM-T88V, TM-T90, TM-L90, TM-U220, and the TM-U230, attach the control panel sheet to see the control panel in the correct direction, since the operation direction of these printers will be upside down on the wall. (The control panel sheets for the TM-T90, TM-L90, and the TM-U230 are packed with the printer.)

- 1. Open the printer cover (roll paper cover) (not necessary for the TM-T90 or the TM-U220).
- 84 mm
- 2. Align the FEED (Feed) switch mark on the control panel sheet with the FEED (Feed) switch mark on the printer control panel and affix the control panel sheet to the printer.
- 3. Close the printer cover (roll paper cover).

#### Attaching the Roll-paper Stopper (Only for the TM-T88IV/TM-T88V/TM-T88VI)

1. Cut off the roll-paper stopper.



- 2. Open the printer cover (roll paper cover).
- 3. Align the 2 projections on the roll-paper stopper with the holes in the printer, and push them into place. For the TM-T88V/TM-T88VI, align the projections with the holes, and rotate the roll-paper stoppers toward the printer back until they click.

#### Note:

For the TM-T88V/TM-T88VI, make sure the position of the stepped parts on the top of the rollpaper stoppers are aligned with that of the projections on the roll paper holder (for 58 mm paper width, on the roll paper guide).



#### Changing the Roll-paper Detector Position (Only for the TM-T88IV/TM-T88V/TM-T88VI and the TM-T90)

- 1. Loosen the screw for the detector.
- 2. Push the lever on the detector until it touches the back of the hole.
- 3. Turn the knob toward you until the lever clicks into place in the other hole.
- 4. While settling the knob by pressing the knob toward you, secure the screw.



## Changing the Roll-paper Near-end Detector Position and Paper Width (Only for the TM-U220)

Two types of screws are used with the WH-10:  $3\times 6$  and  $3\times 10$ . The longest screw ( $3\times 12$ ) will not be used.

- Open the printer cover (roll paper cover). For a model that does not have a roll-paper near-end detector and does not need a change in paper width, jump to step 7. For a model that does not have a roll-paper near-end detector and needs a change in paper width, jump to step 3.
- 2. Loosen the detector adjustment screw a little bit by using a tool such as a coin and then loosen the screw gently by hand as until it stops. It must not be removed completely.





Detector adjustment screw

3. Remove the 2 screws of the roll paper guide.





For a model that does not have a roll-paper near-end detector, jump to step 6.

4. Rotate the detector lever on the roll paper guide to change its direction.

#### Note:

After the direction of the detector lever is changed, be sure that the cable is connected to the connector firmly.



5. Tighten the detector adjustment screw.

6. Align the hole on the roll paper guide with the hole on the roll paper holder to match your roll paper width and then tighten the screw (3×10).

#### Note:

You will not use one of the two screws that have been removed when the roll paper guide is removed. Please store it as an extra screw in case you need it.



7. Align the hole on the roll paper holder for hanging bracket with the dowel on the roll paper guide. (For a model that needs a change of paper width, the hole to be used will be different to match your roll paper width.)

Putting the screw  $(3 \times 6)$  in the hole on the roll paper holder for hanging bracket makes it easier for you to tighten the screw in the next step.



8. Tighten the screw  $(3 \times 6)$  to fix the roll paper holder for hanging bracket and the base frame.



9. Tighten the screw (3  $\times$  10) to fix the roll paper holder for hanging bracket and the roll paper holder.



10. Check that the brake arm is up as shown in the illustration below.





Do not move the brake arm until the roll paper holder for hanging bracket is attached onto the base frame. Otherwise the arm part will be damaged.

11. Insert the dowel of the cam into the hole of the platen frame.



#### English

12. While you make sure the pin of the brake arm is in the groove on the inner side of the cam, rotate the cam along with the surface of the platen frame in the direction indicated by the arrow until it clicks into position.



13. Close the printer cover (roll paper cover).

#### Note:

When closing the cover, push the middle of the printer indicated by the circle in the illustration below.



14. Turn the printer over and then put it on the packing box as a horizontal platform.



15. See the "Installing the Brackets" section for attaching the brackets.

#### Removing the Cam

While you push the cam through the hole on the platen frame with a pointed tool such as tweezers, rotate the cam in the upward direction to remove it.



#### Installing the Brackets

Four different sets of screw holes are found on each bracket. Each hole is identified by a number; be sure to use the holes indicated in the instructions.

#### TM-T88IV/TM-T88V/TM-T88VI

Attach the upper bracket to the holes numbered "3" and the lower bracket to the holes numbered "4" using the screws  $(3 \times 12)$ .



## TM-T88IV/TM-T88V/TM-T88VI with the OT-BX88/OT-BX88V/OT-BX88VI Power Supply Cover Option

Attach both the upper bracket and the lower bracket to the holes numbered "4" using the screws  $(3 \times 12)$ .



#### TM-U230

Attach the upper bracket to the holes numbered "2" and the lower bracket to the holes numbered "1" using the screws ( $3 \times 12$ ).



#### TM-T90/TM-L90

Attach the upper bracket and the lower bracket to the holes numbered "4" using the screws (3  $\times$  12).



#### TM-U220

Attach the upper bracket to the holes numbered "2" and the lower bracket to the holes numbered "1" using the screws  $(3 \times 6)$ .



## Mounting the Printer on the Wall



When mounting the printer, make sure that the wall-mount is securely fastened to the wall.

When the brackets are attached properly for the TM-U220B/U220D, the printer's control panel will be on the top and the connector side on the bottom. For the TM-T88IV/TM-T88V/TM-T88VI, TM-T90, and TM-L90, the power switch will be on the top and the connector side on the bottom. For the TM-U230, the connector side will be on the bottom. If this is not the case, please see "Installing the Brackets" section and reattach the brackets in the proper position.

Slide the brackets into the slots of the wall-mount, starting with the top bracket.



日本語

壁掛金具
 WH-10
 設置マニュアル

WH-10はプリンターを壁に取り付けて使用するための取付金具です。

本マニュアルはWH-10の取り付け方法、取り扱い上の注意点などについて説明しています。

## 取り付けのできる製品

本金具は以下に示した製品にのみ使用できます。下記以外の製品については、取り付 けができなかったり、場合によっては正常に動作しない可能性がありますのでご注意 ください。

- □ TM-T88IV/TM-T88V/TM-T88VI
- TM-T88IV/TM-T88V/TM-T88VI(電源ボックス OT-BX88/OT-BX88V/OT-BX88VI 付)
- TM-U220B/TM-U220D 〔シリアルナンバー\*\*\*030000 以降の製品(\*\*\* は機種によって異なる)〕
- □ TM-U230
- □ TM-T90
- □ TM-L90

## 壁掛け状態で使用する上での注意点

- TM-T88IV/TM-T88V/TM-T88VIを壁掛けで使用する場合は、必ずコネクターカ バーを装着してください。
- □ 紙詰まりを防ぐため、また印字濃度を確保するため、3 枚紙のロール紙を TM-U220 に使用しないでください。
- カットした用紙が静電気でケースに貼り付く場合がありますのでご注意ください。
  (この静電気はプリンターの動作には影響ありません)

## 同梱品

開梱したら、付属品がすべてそろっていることと、本体および付属品に損傷がないこ とを確認してください。万一、不足や不良がある場合は、お買い上げいただいた販売 店までご連絡ください。





壁掛け金具およびハンガーは、輸送中や保管中の環境条件により、端面に多少の錆が 発生することがあります。

その場合は紙やすり等で錆を取り除いてください。

## 取り付け

取り付け作業に入る前に、プリンターおよびプリンターに接続されているすべての機器 の電源を切り、プリンターに接続されているすべてのケーブルを外してください。

## 壁掛け金具の取り付け

## ▲ <sub>注意:</sub>

プリンターを確実に固定するために、木、コンクリート、または金属の壁に壁掛け金具を取り付けてください。壁の厚さは 10 mm以上を推奨します。

壁掛け金具取り付け用のネジは、プリンターを保持するのに十分な強度が得られるように、 壁の状態に合った、また壁へのねじ込みの長さが十分に確保できるネジを選んでください。 ネジは、径が4㎜、長さが12㎜以上のものを推奨します。

壁掛け金具の壁への取り付けは金具にあるネジ穴10個すべてを使用して固定してください。

壁掛け金具の取り付けの際は、プリンターの周囲に十 分なスペースがある場所を選んでください。

プリンターカバー類が開いた状態で十分なスペースが あることを確認してください。

プリンターを取り付ける壁に壁掛け金具を右図の方 法で(Aで示した部分が上になる方向で)10箇所 のネジ穴を用いて取り付けてください。壁掛け金具 を取り付けるためのネジは同梱されていませんの で、壁の種類に合ったネジをご用意ください。

## 操作パネルシートの貼り付け

TM-T88IV/TM-T88V、TM-T90、TM-L90、TM-U220、TM-U230は、壁掛け状態で使用するとプリ ンターの使用方向が逆転するため、操作パネル部の 文字を見やすくするための操作パネルシートを貼り 付けてください。



(TM-T90、TM-L90、TM-U230の操作パネルシートはプリンター本体に同梱されています。)

- プリンターカバー(ロール紙カバー)を開けます。(TM-T90、TM-U220 はカバー を開ける必要はありません。)
- プリンターの操作パネルの FEED (Feed) ボタンの印と同梱の操作パネルシートの FEED (Feed) ボタンの印とを合わせて、操作パネルシートをプリンターに貼り付け ます。
- 3. プリンターカバー (ロール紙カバー)を閉じます。

#### 日本語

## ロール紙ストッパーの取り付け

本作業は TM-T88IV/TM-T88V/TM-T88VI のみ行います。

1. ロール紙ストッパーを切り離します。



2. プリンターカバー (ロール紙カバー)を開けます。

 ロール紙ストッパーの2つの突起を、プリンターの穴に合わせて押し込みます。 TM-T88V/TM-T88VIの場合は、その後きちんと固定されるまでロール紙ストッ パーをプリンター背面側に回します。

注記:

TM-T88V/TM-T88VIの場合、ロール紙ストッパー上部の段差の位置が、ロール 紙ホルダー(紙幅58mm 仕様の場合はロール紙ガイド)の突起部の位置と合って いることを確認してください。



#### ロール紙残量検出器の取り付け位置変更

本作業は、TM-T88IV/TM-T88V/TM-T88VI および TM-T90 のみ行います。

- 1. 検出器固定ネジをゆるめます。
- 2. 検出レバーを穴の奥に突き当たるまで押し込みます。
- つまみを手前に回します。検出レバーがもう1つの穴にセットされるまで回して ください。
- 4. つまみを手前に引き、位置を固定させながら、検出器固定ネジを締め付けます。



## 日本語

#### ロール紙残量検出器の取り付け位置・紙幅変更

本作業は、TM-U220のみ行います。

長さが異なるネジ(3×6、3×10)を使用します。一番長いネジ(3×12)は使用しません のでご注意ください。

- プリンターカバー(ロール紙カバー)を開けます。ロール紙残量検出器のないモデルで紙幅を変更しない場合は、ステップ7へ進んでください。ロール紙残量検出器がないモデルで紙幅を変更する場合は、ステップ3へ進んでください。
- コインのようなものを使用して検出器固定ネジを少しゆるめ、その後、検出器固 定ネジが止まるまで、指で軽くゆるめていきます。検出器固定ネジは完全に外さ ないでください。



検出器固定ネジ

ロール紙ガイドのネジ(2箇所)を外します。
 メメイ()/ ナー・レート



ロール紙残量検出器がないモデルの場合は、ステップ6へ進んでください。

ロール紙ガイド上の検出器レバーを回し、方向を変更します。
 注記:

方向を変更後、ケーブルがコネクターから外れていないことを確認してください。



- 5. 検出器固定ネジを締めます。
- ロール紙ガイドの穴と、ロール紙ホルダーの穴を合わせ、ネジ(3×10)を締めて 固定します。使用するロール紙幅によって、合わせる穴が異なります。 注記:

ロール紙ガイドを取り外した際の2本のネジのうち1本は使用しませんので、予備として大切に保管してください。



 ロール紙壁掛けホルダーの穴と、ロール紙ガイドのダボを合わせてセットします。 (紙幅を変更する場合は、使用する紙幅によってロール紙壁掛けホルダーの穴が異 なります。)

ロール紙壁掛けホルダーの穴にネジを通しておくと、次のステップのネジ止めが しやすくなります。



8. ネジ (3×6) を締めて、ロール紙壁掛けホルダーをベースフレームに固定します。



日本語

9. ネジ (3×10) を締めて、ロール紙壁掛けホルダーをロール紙ホルダーに固定しま す。



10. ブレーキアームが、上向き(イラストの位置)になっていることを確認します。





ロール紙壁掛けホルダーを、ベースフレームにネジ止めするまで、ブレーキアームを動 かさないでください。アームの取り付け部分が外れるおそれがあります。

11. カムのダボを、プラテンフレームの穴に挿入します。



カムをプラテンフレームの側面に沿って、「カチッ」と音がするまで矢印方向に回します。この時、ブレーキアームのピンが、カムの内側の溝に入っていることを確認します。



プリンターカバー(ロール紙カバー)を閉じます。
 注記:
 カバーを閉じる際は、カバーの中央部(イラストの丸印部分)を押してください。



WH-10 設置マニュアル 19



14. 梱包箱を組み立てたものを台にし、その上にプリンターを裏返して水平に置きま す。



15. 「ハンガーの取り付け」の項を参照し、ハンガーを取り付けます。

## カムの取り外し

ピンセットなどの先の細いもので、プラテンフレームの穴からカムを押し、カムを上方向に回転させて取り外します。



### ハンガーの取り付け

ハンガーを固定するネジ穴がハンガー上に4種類あります。(これらはハンガーに数字 で示してあります。)説明に従って正しいネジ穴を使用してください。

#### TM-T88IV/TM-T88V/TM-T88VI

ハンガー2枚をプリンターにセットし、上のハンガーは「3」の穴、下のハンガーは「4」の穴に同梱のネジ(3×12)を通して締め付けます。



TM-T88IV/TM-T88V/TM-T88VIオプション(OT-BX88/OT-BX88V/OT-BX88VI)付

ハンガー2枚をプリンターにセットし、上のハンガーと下のハンガーの「4」の穴に同梱のネジ(3×12)を通して締め付けます。



#### TM-U230

ハンガー2枚をプリンターにセットし、上のハンガーは「2」の穴、下のハンガーは「1」の穴に同梱のネジ(3×12)を通して締め付けます。



#### TM-T90/TM-L90

ハンガー2枚をプリンターにセットし、上のハンガーと下のハンガーを「4」の穴に 同梱のネジ (3×12) を通して締め付けます。



### TM-U220

ハンガー2枚をプリンターにセットし、上のハンガーは「2」の穴、下のハンガーは「1」の穴に同梱のネジ(3×6)を通して締め付けます。



プリンターの壁への取り付け

注意:

取り付けの際、壁掛け金具が壁に確実に固定されているか再確認してください。

正常に取り付けされた時、TM-U220B/U220D の場合はプリンターの操作パネルが上、コ ネクターが下にあります。TM-T88IV/TM-T88V/TM-T88VI、TM-T90、TM-L90 が正 常に取り付けられた場合は、電源スイッチが上、コネクターが下にあります。TM-U230 の 場合は、コネクターが下にあります。もし誤っている場合は、「ハンガーの取り付け」の項に 戻って再度正しく取り付けてください。

ハンガーを壁掛け金具の溝に差し込みます。



©Seiko Epson Corporation 2003-2017. All rights reserved. Printed in China

