

EPSON®

EMP-S3



はじめにお読みください

日本語

请先阅读

中文（简体）

請先閱讀

中文（繁體）

Read This First

English

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

General Notice:

EPSON is a registered trademark of SEIKO EPSON CORPORATION.

Macintosh, Mac, and iMac are registered trademarks of Apple Computer, Inc.

IBM is a registered trademark of International Business Machines Corporation.

Windows and Windows NT are trademarks of Microsoft Corporation in the United States of America.

Dolby is a registered trademark of Dolby Laboratories.

Pixelworks and DNX are trademarks of Pixelworks, Inc.

The 3LCD logo is a trademark of SEIKO EPSON CORPORATION.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

This product uses open source software.

Acrobat Reader © 1987-2002 Adobe Systems Incorporated. All rights reserved.

Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

はじめにお読みください

同梱品の確認	2
説明書の構成	3
Document CD-ROM 内の説明書の見方	4

本製品をご使用になる前に、次の3点をご確認ください。

1. まず本書をご覧ください。

同梱品と説明書についてご確認ください。

2. 『安全にお使いいただくために / サポートとサービスのご案内』を ご覧ください。

本製品を安全にお使いいただくための注意事項やサポートとサービスのご案内などが記載されています。使い始める前に必ずご覧ください。


3. 『セットアップガイド』をご覧ください。

本機を使い始めるまでの準備と投写開始時の基本操作について記載しています。

※便利な機能、環境設定メニューの使い方などについては、『取扱説明書』をご覧ください。

同梱品の確認


下記のチェックリストをご覧になり、同梱品を確認してください。
万一、不足や不良がありましたら、お手数ですがお買い求めいただいた
販売店までご連絡ください。

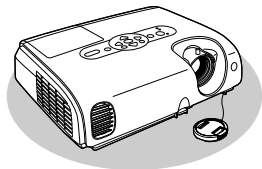


□プロジェクター本体
(レンズカバー付属)




□リモコン



□単4形アルカリ乾電池
(2本)
リモコンにセットして使います。




□電源ケーブル
(日本国内用1.8m)
本機と電源コンセント
を接続します。



□コンピュータケーブル
(ミニD-Sub15pin/
ミニD-Sub15pin 1.8m)
コンピュータの映像を投写
するときに使います。



□パスワードプロテクト
シール
パスワードプロテクトを有効にし
た場合は、盗難防止の効果を高める
ために、本機のお好きな位置に貼っ
てください。

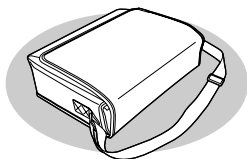

□ソフトキャリング
ケース
本機を持ち運ぶときに
使います。

ドキュメント類

- | | |
|--|---|
| ☐ はじめにお読みください(本書) | ☐ セットアップガイド |
| ☐ 安全にお使いいただくために/
サポートとサービスのご案内 | ☐ Document CD-ROM |
| | ☐ お客様情報＋正式保証書発行カード |

説明書の構成

本製品には、次の2つの説明書が添付されています。


『セットアップガイド』



本機を使い始めるまでの準備(設置・コンピュータやビデオ機器との接続)と投写開始時の基本操作について記載しています。

以下の説明書は、Document CD-ROMに収録されています。

『取扱説明書』(PDF)



便利な機能、環境設定メニューの使い方、困ったときの対処方法、お手入れの方法などについて記載しています。

※このDocument CD-ROMには、PDF版の『セットアップガイド』も収録されています。

👉「Document CD-ROM内の説明書の見方」次ページ

本製品を安全に正しくお使いいただくために、添付のマニュアルをよくお読みください。不明な点をいつでも解決できるように、その後はすぐに見られる場所に大切に保存してください。

Document CD-ROM 内の説明書の見方



Document CD-ROMに収録されているPDFマニュアルのバージョンはPDF 1.3です。このPDFマニュアルをご覧いただくには、Acrobat Reader4.0以上またはAdobe Readerが必要です。Document CD-ROMにはWindows版のAcrobat Reader 5.05が添付されています。これ以外のAcrobat ReaderまたはAdobe Readerが必要な場合はアドビシステムズ社のホームページをご覧ください。


コンピュータの電源を入れ、CD-ROMドライブにDocument CD-ROMをセットします。

Windowsの場合

自動的に次のTOPページが表示されます。

Macintosh の場合

お使いのOSに応じて「Launcher_for_OS86_9x」ファイルか、「Launcher_for_OSX」ファイルをダブルクリックすると次のTOPページが表示されます。

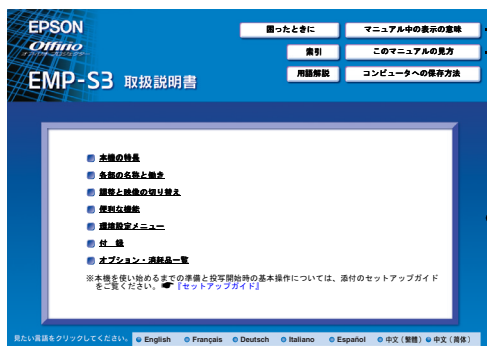

内容を見る前に「マニュアル中の表示の意味」と「このマニュアルの見方」をご覧ください。

メニュー項目の上にポインタを移動させるとポインタに変わります。クリックするとその内容を見ることができます。

各説明書は、画面でご覧いただくだけでなく、印刷してご覧いただくこともできます。印刷するには目的の説明書を表示している状態で「印刷」アイコンをクリックします。「印刷」アイコンは「このマニュアルの見方」でご確認ください。



Windowsの場合、Acrobat Readerがインストールされていないときは、メッセージが表示されます。表示されたメッセージに従ってAcrobat Readerをインストールします。

インストール完了後、CD-ROMドライブからDocument CD-ROMをいったん取り出し、もう一度CD-ROMをセットすると、TOPページが表示されます。

请先阅读

打开投影机包装.....	6
文档内容	7
浏览 Document CD-ROM 中的内容	8

在使用本产品之前，请先检查以下三点。

1. 阅读本册子。

检查随投影机提供的部件和手册。

2. 阅读“安全使用须知 / 全球保修条款”。

其中包含有安全使用投影仪的重要信息，同时还包含全球保修的条款和条件。在使用投影仪之前务必认真阅读本册子。


3. 阅读“设定手册”。

本手册讲解设定有用功能和首次投影时的基本操作。

有关便捷功能和配置菜单的更多资料，请参阅“使用说明书”。

打开投影机包装


当打开投影机包装时，请确认其中包含所有这些部件。
如果任何部件缺失或不正确，请与销售商联系。

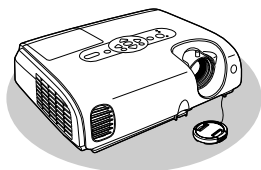


☐ 投影机
(带安装好的镜头盖)




☐ 遥控器



☐ AAA 型碱性电池
(2 节)
装入遥控器。




☐ 电源线
(1.8 m)
用于将投影机连接到电源插座上。



☐ 电脑电缆
(微型 D-sub 15 针 / 微型 D-sub 15 针, 1.8m)
投影电脑映像时使用。



☐ 密码保护不干胶标签
启用密码保护时，将不干胶贴纸贴于投影机某处以增强防盗效果。

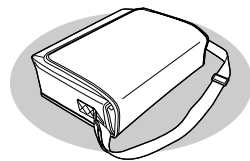

☐ 软携带箱
(附带肩带和提手)
携带投影机。

说明文档

- ☐ 请先阅读 (本册子)
- ☐ 安全使用须知 / 全球保修条款

- ☐ 设定手册
- ☐ Document CD-ROM

文档内容

以下 2 种手册随本投影机提供。

设定手册



包含在使用（设定和连接视频设备或电脑）前准备投影机和开始投影的基本操作信息。

Document CD-ROM 中包含以下文档。

使用说明书 (PDF)



包含关于本投影机一般有用功能、配置菜单、故障排除和保养方法的信息。

* “设定手册”的 PDF 版本会记录在本 Document CD-ROM 中。

☞ “浏览 Document CD-ROM 中的内容” 8 页

请务必仔细阅读这些附送的手册，以便确保安全、正确地操作。请将这些手册放在附近安全的地方，供您随时查阅，以便帮助您解决任何可能发生的问题或存在的疑问。

浏览 Document CD-ROM 中的内容

注意:

Document CD-ROM 中的 PDF 手册是 1.3 版。浏览这些 PDF 手册需要 Acrobat Reader 4.0 版或更高的版本,或是 Adobe Reader。Document CD-ROM 中含有用于 Windows 的 Acrobat Reader 5.05。如果您需要不同版本的 Acrobat Reader 或 Adobe Reader,请访问 Adobe Systems 的网站。

打开电脑的电源,将 Document CD-ROM 插入电脑的 CD-ROM 驱动器中。

如果使用 Windows

自动显示主页面。

如果使用 Macintosh

双击“Launcher_for_OS86_9x”或“Launcher_for_OSX”文件以显示主页面。



在查看菜单项目的详细内容之前,请先阅读主页面上的“手册中的符号的意义”和“本说明书的使用方法”。

将鼠标指示器移动到某一菜单项目上时,指示器将变为手形。如果您单击某一菜单项目,将显示该菜单的详细内容。

所有的手册均可以打印出来及在屏幕上浏览。要打印出某一手册,先在屏幕上显示所需的手册,然后单击“打印”图标。有关“打印”图标的详情,请参阅“本说明书的使用方法”。

注意:

使用 Windows 时,如果电脑上还未安装 Acrobat Reader,则会显示一信息。请按屏幕上显示的说明安装 Acrobat Reader。一旦安装结束,就从电脑的 CD-ROM 驱动器中取出 Document CD-ROM,然后重新插入 CD-ROM 以便再次显示 TOP 页面。

請先閱讀

拆封投影機.....	10
文檔內容	11
瀏覽 Document CD-ROM 中的內容	12

開始使用本產品之前，請先檢查以下三點。

1. 仔細閱讀本冊子。

檢查隨投影機提供的部件和手冊。

2. 請閱讀“安全使用須知 / 全球保修條款”。

其中的重要資訊，讓使用者瞭解如何安全的操作投影機，並且說明全球保修的條件和條款。使用投影機之前，請務必詳閱本冊子。


3. 仔細閱讀“設定說明書”。

本手冊講解設定有用功能和首次投影時的基本操作。

有關便捷功能和配置選單的更多資料，請參閱“使用說明書”。

拆封投影機


當您拆封投影機時，請確定所有元件都已齊備。
若有元件遺失或隨附的元件不正確，請與經銷商聯繫。

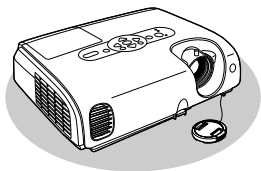


☐ **投影機**
(帶安裝好的鏡頭蓋)




☐ **遙控器**



☐ **AAA 型鹼性電池**
(2 節)
裝入遙控器。




☐ **電源線**
(1.8 m)
用於將投影機連接到電源插座上。



☐ **電腦電纜**
(微型 D-sub 15 針 / 微型 D-sub 15 針，1.8m)
投影電腦映像時使用。



☐ **密碼保護不乾膠標籤**
啟用密碼保護時，將不乾膠貼紙貼於投影機某處以增強防盜效果。

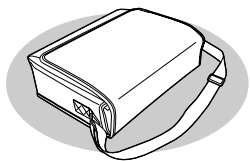

☐ **軟攜帶箱**
(附帶肩帶和提手)
攜帶投影機。

說明文檔

- ☐ 請先閱讀 (本冊子)
- ☐ 安全使用須知 / 全球保修條款

- ☐ 設定說明書
- ☐ Document CD-ROM

文檔內容

以下 2 種手冊隨本投影機提供。

設定說明書



包含在使用（設定和連接視頻設備或電腦）前準備投影機和開始投影的基本操作信息。

Document CD-ROM 中包含以下文檔。

使用說明書 (PDF)



包含關於本投影機一般有用功能、配置選單、故障追尋和保養方法的信息。

* “設定說明書”的 PDF 版本會記錄在本 Document CD-ROM 中。

👉 “瀏覽 Document CD-ROM 中的內容” 12 頁

請務必仔細閱讀這些附送的手冊，以便確保安全、正確地操作。請將這些手冊放在附近安全的地方，供您隨時查閱，以便幫助您解決任何可能發生的問題或存在的疑問。

瀏覽 Document CD-ROM 中的內容

要點：

Document CD-ROM 中的 PDF 手冊是 1.3 版。瀏覽這些 PDF 手冊需要 Acrobat Reader 4.0 版或更高的版本，或是 Adobe Reader。Document CD-ROM 中含有用於 Windows 的 Acrobat Reader 5.05。如果您需要不同版本的 Acrobat Reader 或 Adobe Reader，請訪問 Adobe Systems 的網站。

打開電腦的電源，將 Document CD-ROM 插入電腦的 CD-ROM 光碟機中。

如果使用 Windows

自動顯示主頁面。

如果使用 Macintosh

按兩下“Launcher_for_OS86_9x”或“Launcher_for_OSX”文件以顯示主頁面。



在查看選單項目的詳細內容之前，請先閱讀主頁面上的“說明書中的符號的意義”和“本說明書的使用方法”。

將滑鼠指示器移動到某一選單項目上時，指示器將變為手形。如果您按一下某一選單項目，將顯示該選單的詳細內容。

所有的手冊均可以打印出來及在螢幕上瀏覽。要打印出某一手冊，先在螢幕上顯示所需的手冊，然後按一下“打印”圖標。有關“打印”圖標的詳情，請參閱“本說明書的使用方法”。

要點：

使用 Windows 時，如果電腦上還未安裝 Acrobat Reader，則會顯示一信息。請按螢幕上顯示的說明安裝 Acrobat Reader。一旦安裝結束，就從電腦的 CD-ROM 光碟機中取出 Document CD-ROM，然後重新插入 CD-ROM 以便再次顯示 TOP 頁面。

Read This First

Unpacking the Projector	14
Document Contents	15
Viewing the Contents of the Document CD-ROM	16

Before using this product, please check the following three points.

1. Read this booklet.

Check that you have the correct components and manuals with the projector.

2. Read the "Safety Instructions/World-Wide Warranty Terms".

It contains important information on using the projector safely, and also includes the terms and conditions of the worldwide warranty. Make sure to read this booklet thoroughly before using the projector.


3. Read the "Setup Guide".

This explains basic operations when setting up this useful function, and projecting for the first time.

See the "User's Guide" for more information on convenient features and the configuration menu.

Unpacking the Projector

When you unpack the projector, make sure that you have all these components. If any of the components are missing or incorrect, please contact the supplier.

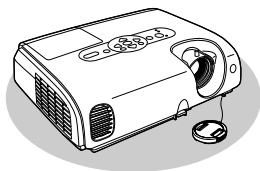

☐ Projector

(With lens cover attached)




☐ Remote control



☐ AAA alkali batteries

(2 pcs.)


Insert into the remote control.



☐ Power cable

(1.8 m (6 ft.))

Use to connect the projector to an electrical outlet.



☐ Computer cable


(mini D-Sub 15-pin/mini D-Sub 15-pin, 1.8 m (6 ft.))

Use when projecting computer images.



☐ Password Protect sticker

When Password Protect is enabled, attach this sticker to a location on the projector where it will be clearly visible to increase anti-theft effectiveness.

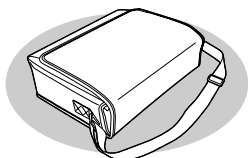

☐ Soft carrying case

(with shoulder strap and handle)

For carrying the projector.

Documentation

- ☐ Read This First (this booklet)
- ☐ Safety Instructions/World-Wide Warranty Terms

- ☐ Setup Guide
- ☐ Document CD-ROM

Document Contents

This projector is supplied with the following two manuals.

Setup Guide



Contains information on basic operations for preparing the projector before use (setup and connecting video equipment or a computer) and for starting projection.

The following documents are contained in the Document CD-ROM.

User's Guide (PDF)



Contains information on common useful function, the configuration menu, troubleshooting, and maintenance for this projector.

* The PDF version of the "Setup Guide" is recorded on this Document CD-ROM.

☞ "Viewing the Contents of the Document CD-ROM" p.16

Make sure to read the manuals carefully in order to ensure safe and correct operation. Keep them in a safe place near the projector where they will always be available to refer to in order to help solve any problems or questions you may have.

Viewing the Contents of the Document CD-ROM

Tip :

The PDF manuals on the Document CD-ROM are version 1.3. Acrobat Reader version 4.0 or later, or Adobe Reader is required to view the PDF manuals. The Document CD-ROM contains Acrobat Reader 5.05 for Windows. If you need a different version of Acrobat Reader or Adobe Reader, visit the Adobe Systems website.


Turn on the computer and insert the Document CD-ROM into the computer's CD-ROM drive.

If using Windows

A page will be displayed automatically.

If using a Macintosh

Double-click the "Launcher_for_OS86_9x" or the "Launcher_for_OSX" file to display a page.

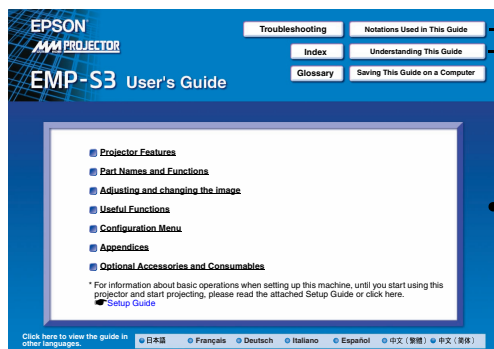

Read the "Notations Used in This Guide" and "Understanding This Guide" on the main page before looking in detail at the menu items.

When you move the mouse pointer over a menu item, the pointer will change to a hand icon. If you click a menu item, the details for that item will be displayed.

All of the manuals can be printed out as well as viewed on-screen. To print out a manual, display the required manual on the screen and then click the "Print" icon. Refer to "Understanding This Guide" for details about the "Print" icon.

Tip :

When using Windows, a message will be displayed in case that Acrobat Reader is not already installed on the computer. Follow the instructions which are displayed on the screen to install Acrobat Reader. Once the installation has been completed, remove the Document CD-ROM from the computer's CD-ROM drive and then re-insert it to display the TOP page once more.

EPSON®



この取扱説明書は100%再生紙
を使用しています。
打印在100%回收廢紙上
打印在100%回收廢紙上
Printed on 100% recycled paper.



Printed in China
410082700
XX.XX-XX(XXX)